

User Guide
September 2017

Network and storage settings of ES NAS high-availability network storage services

Before the setup.....	3
Purpose	3
Glossary	3
System deployment architecture	4
Preparation before setup	5
To complete the above steps, refer to the QNAP Enterprise Storage Device ES NAS Series Quick Installation Guide. Network environment settings	5
Technical overview	5
Network setup steps	6
Storage space setup	8
Technical overview	8
Host list	9
Cache Acceleration.....	12
Add storage pool	16
Expanding Storage Pools	18
Create a shared folder	20
Create an iSCSI Target and iSCSI LUN	23

Before the setup

Purpose

This article is intended to guide users who have completed ES NAS installation and system initialization to configure network and storage settings for a high-availability storage environment.

Glossary

RAID group: RAID groups combine multiple physical hard disks into a logical unit to provide better capacity, read/write performance and/or protection.

Storage pool: Combines physical hard disks or RAID groups into large storage space. The ES NAS storage pool is created by adding a new RAID group, or adding hard disk to an existing storage pool.

Shared folder: Shared folders are created in a storage pool. They are used to store files that can be shared with users or groups with access rights.


NFS: Network File System (NFS) is a distributed file system protocol. The most important feature of NFS is that through network and mounting, it allows different devices with different operating systems to share files with each other. Through NFS, you can open an NFS Server-side directory or file system to NFS Client for data access. In other words, the NFS Client can mount the NFS Server's shared folder to the local host, so it can be easily manipulated as if operating on a local disk.

iSCSI LUN: iSCSI (Internet Small Computer System Interface) is a standard derived from Internet Protocol (IP) that can be used to link data storage devices. The program used to connect to the storage device is called an iSCSI initiator, and the connected device is collectively referred to as the iSCSI device or target. iSCSI LUNs are logical disks mounted to iSCSI target.

Host: Host refers to the device that is connected to the ES NAS for data access, or has mounted the ES NAS shared folder or iSCSI LUN to the local device.

System deployment architecture

The following figures and table shows the settings of a deployment example:

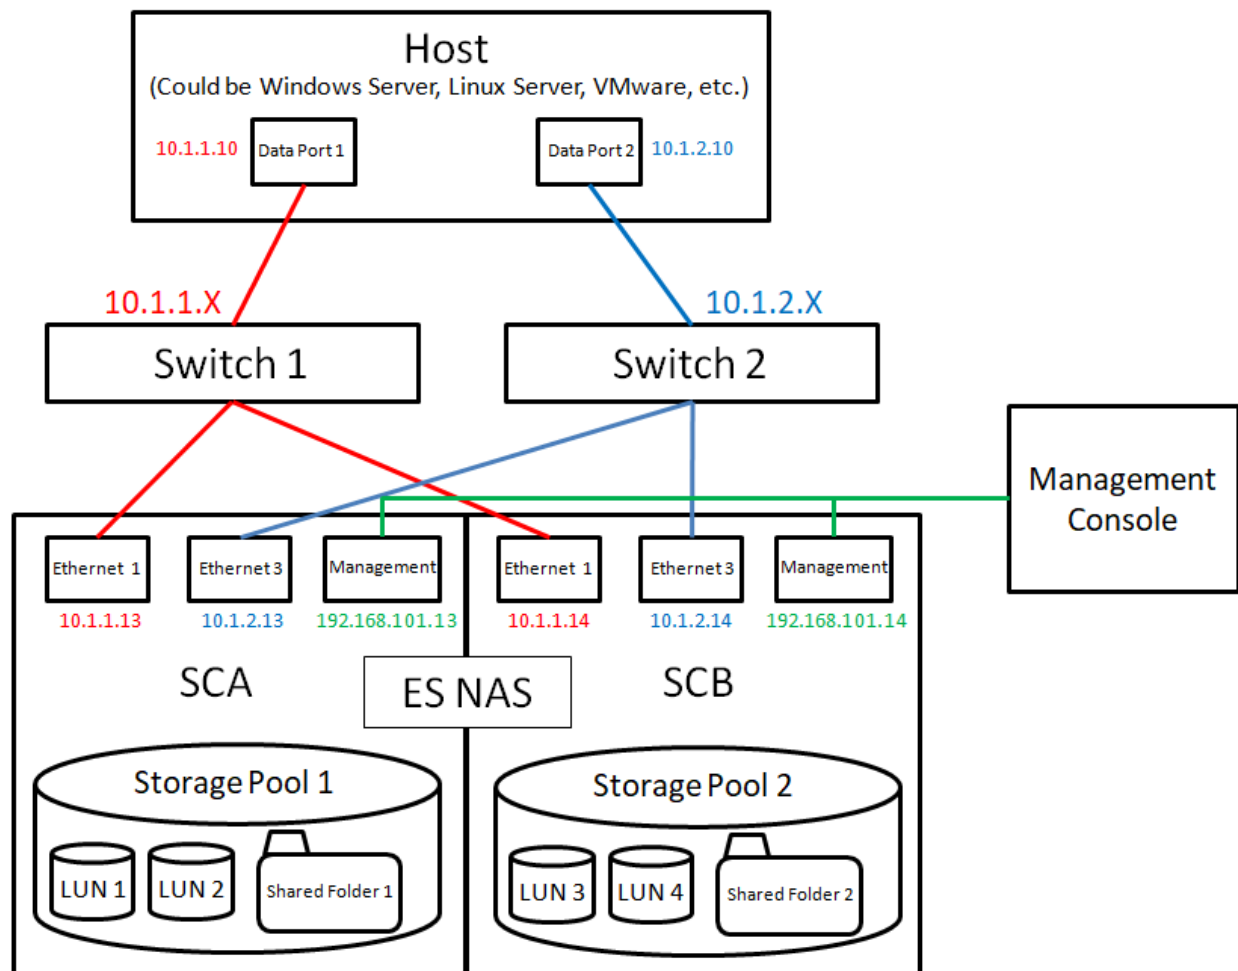

ES NAS		
Interface	IP Address	
	SCA	SCB
Management	192.168.101.13	192.168.101.14
Ethernet 1	10.1.1.13	10.1.1.14
Ethernet 3	10.1.2.13	10.1.2.14

Host	
Interface	IP Address
Data Port 1	10.1.1.10
Data Port 2	10.1.2.10

Preparation before setup


Before setting up the network environment and storage, make sure that you have completed the following tasks.

1. The system hard disks are initialized.
2. The firmware has been updated to the latest version
3. You have logged in to QES using a web browser

To complete the above steps, refer to the [QNAP Enterprise Storage Device ES NAS Series Quick Setup Guide](#). Network environment settings

Technical overview

ES NAS places strong emphasis on high availability and failover, so network configuration is divided into two different use cases: "management" and "data transmission". ES NAS has two controllers, each with a management port and two data ports. The management port is used to open the QES desktop to manage the NAS using a web browser, and the data port is used for data access (such as Samba, NFS, and iSCSI). To achieve complete failover deployment, it is recommended that the data port on each controller be connected to a different network switch and that the data ports on both sides of the controller be configured with static IP addresses. For example, data port 1 of controller A should be set on the same subnet as data port 1 of controller B, and the same should be set for data port 2. As a result, when one controller fails, another controller will automatically take over. The server side can still connect to the controller that has taken over through the original IP address, so that the previous ongoing data access is continued.

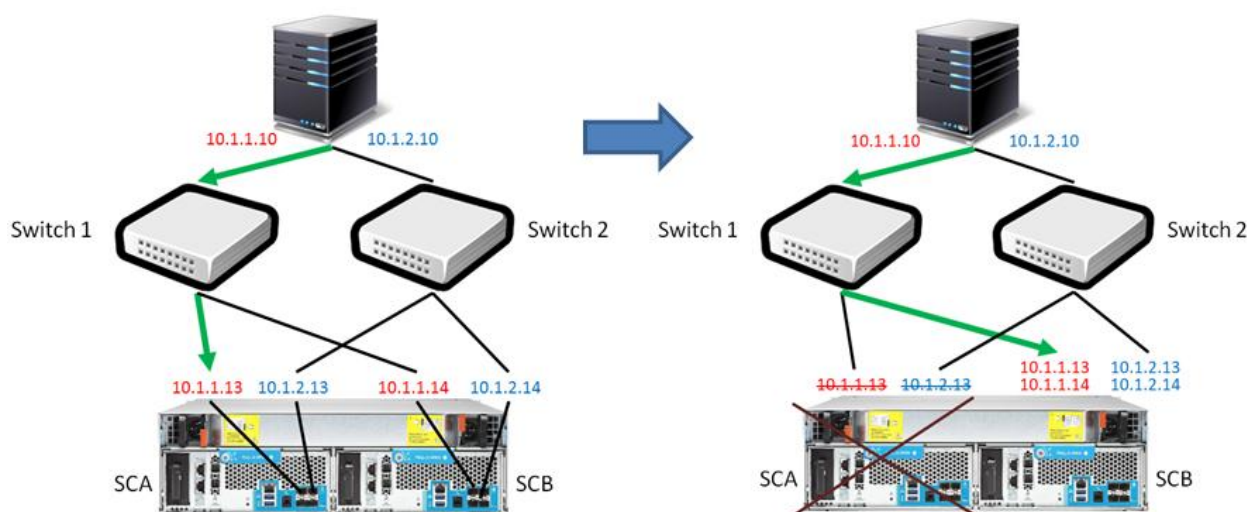


Network setup steps

Follow the below steps to set up:


1. After logging in to QES, click “Network” on the main menu.




2. Click “Edit All”.

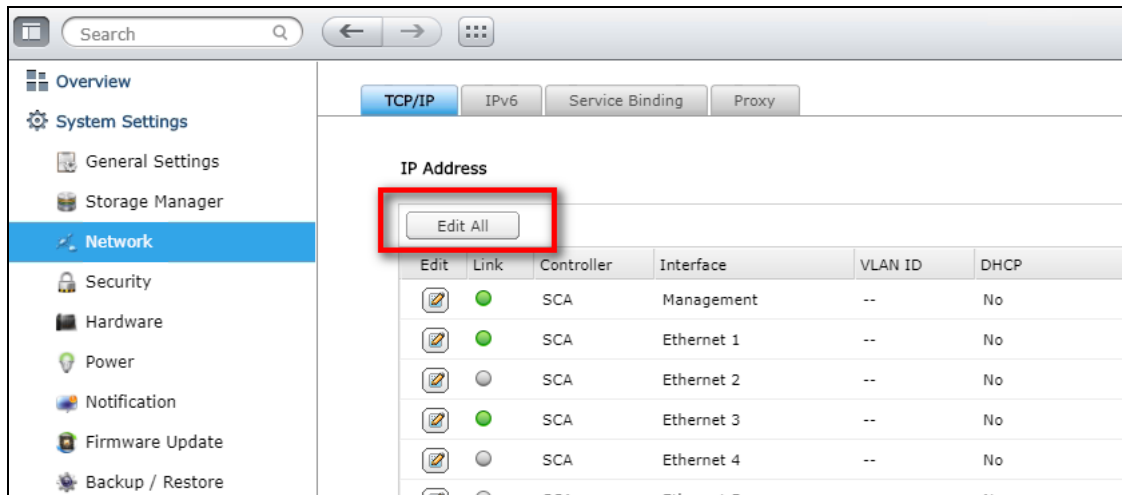

3. Double-click the IP Address and Subnet Mask fields to modify the settings. If the Interface field displays “Management”, it is the management port. If it shows “Ethernet x”, it is a data port. Set the IP Address setting of SCA Ethernet x and SCB Ethernet x to the same subnet as the static IP. For example, if the IP Address setting of SCA Ethernet 3 is 10.1.2.13 with subnet mask of 255.255.255.0, set the IP address of SCB Ethernet 3 to 10.1.2.x, for example 10.1.2.14.

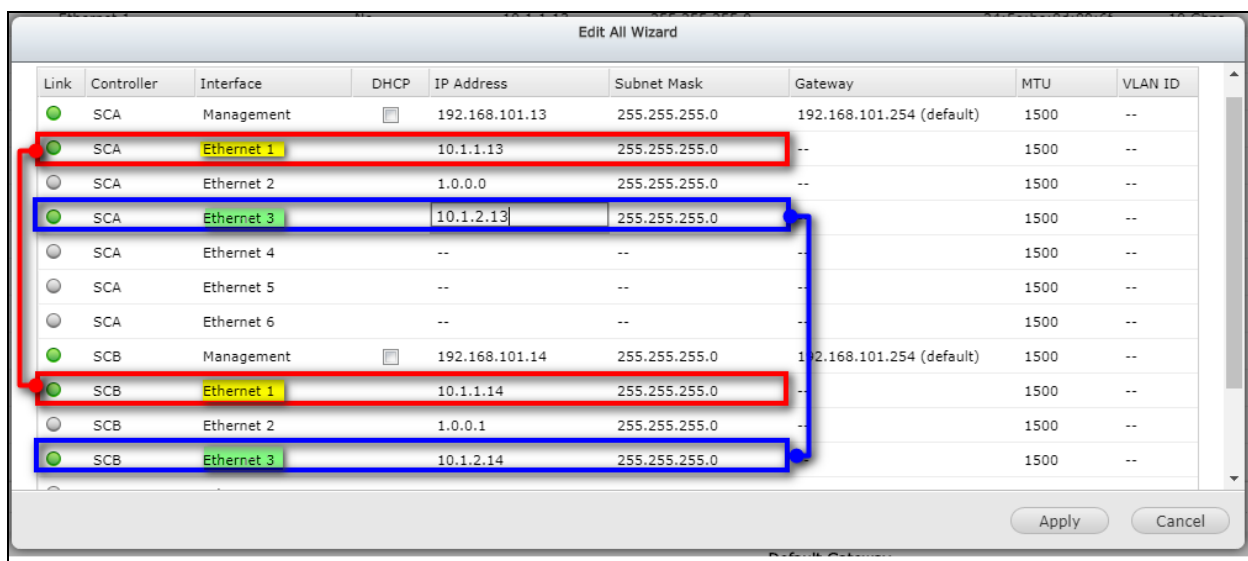

- If the existing network architecture supports Jumbo Frame settings, then select the appropriate MTU for the network environment. Maximum Transmission Unit (MTU) refers to the size (in bytes) of the largest packet that a given layer of a communications protocol can transmit. Adjusting this value increases the amount of Ethernet traffic and reduces CPU usage for large file transfers. The NAS uses standard Ethernet frame (1500 bytes) by default.

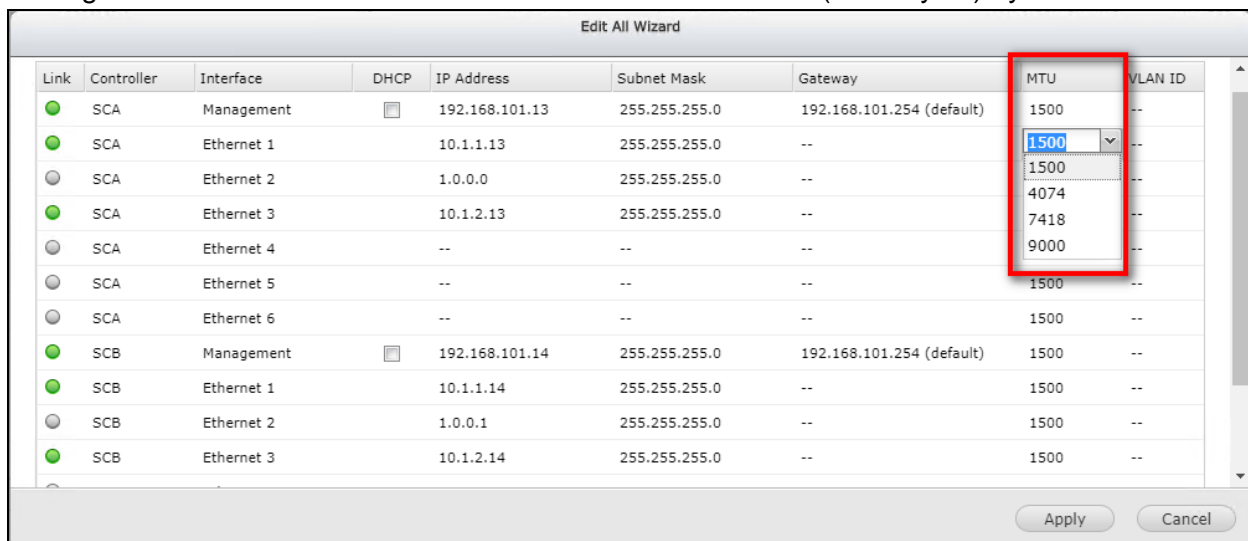


- Click "Apply" to complete the settings.

Link	Controller	Interface	DHCP	IP Address	Subnet Mask	Gateway	MTU	VLAN ID
	SCA	Management	<input checked="" type="checkbox"/>	192.168.101.13	255.255.255.0	192.168.101.254 (default)	1500	--
	SCA	Ethernet 1		10.1.1.13	255.255.255.0	--	1500	--
	SCA	Ethernet 2		1.0.0.0	255.255.255.0	--	1500	--
	SCA	Ethernet 3		10.1.2.13	255.255.255.0	--	1500	--
	SCA	Ethernet 4		--	--	--	1500	--
	SCA	Ethernet 5		--	--	--	1500	--
	SCA	Ethernet 6		--	--	--	1500	--
	SCB	Management	<input checked="" type="checkbox"/>	192.168.101.14	255.255.255.0	192.168.101.254 (default)	1500	--
	SCB	Ethernet 1		10.1.1.14	255.255.255.0	--	1500	--
	SCB	Ethernet 2		1.0.0.1	255.255.255.0	--	1500	--
	SCB	Ethernet 3		10.1.2.14	255.255.255.0	--	1500	--

Storage space setup

Technical overview

ES NAS uses the QNAP flexible storage space management architecture, which is divided into three layers: disk, storage pool, and shared folder / LUN. Users can build, expand and configure storage space flexibly and dynamically at all levels of the architecture according to different requirements, and maximize physical storage device efficiency.

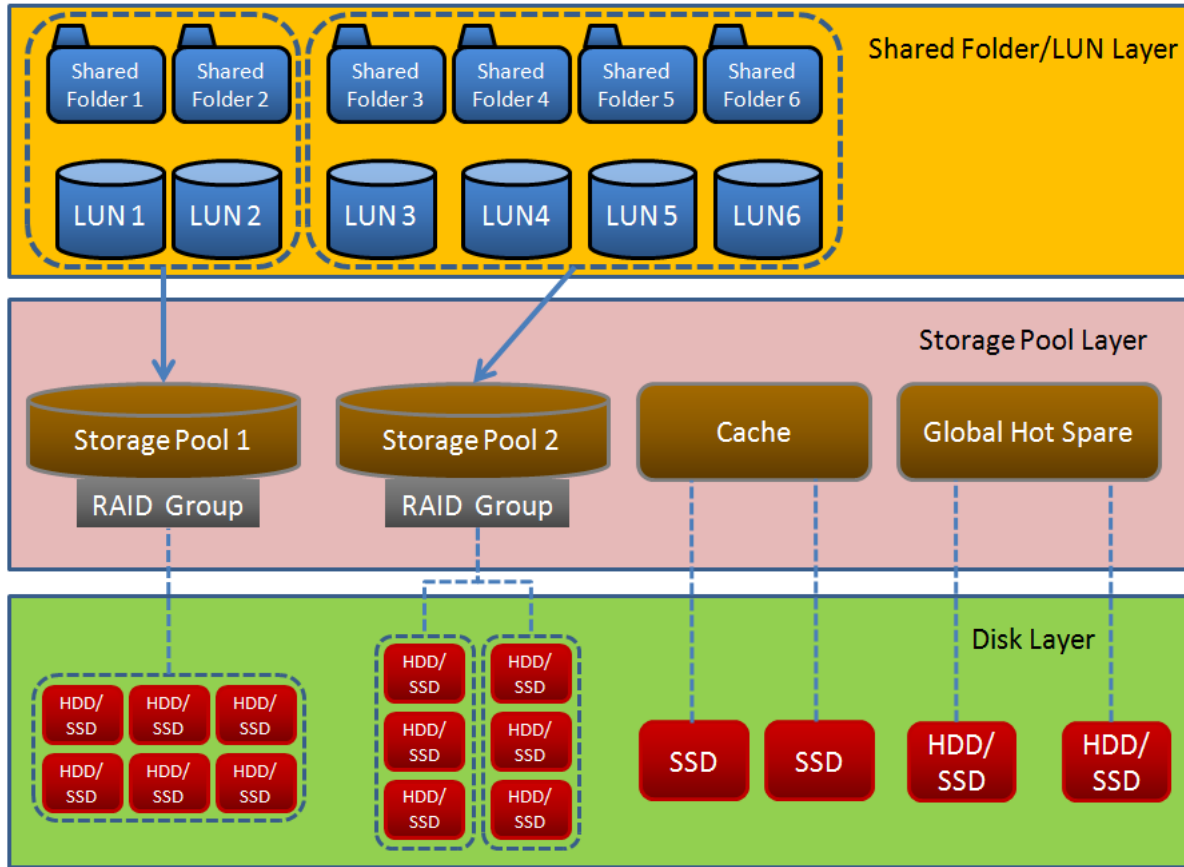

In addition, ES NAS uses dual active controller (Active-Active) storage system architecture. Besides providing fault-tolerant high-availability storage services, it is also different from the more common, single controller (Active-Standby / Active passive) architecture, as both controllers can be active at any time without wasting valuable hardware resources. It is recommended that users build multiple storage pools and distribute the storage pools evenly between controller A and controller B to take advantage of load balancing of the ES NAS dual active controller architecture.


Host list

The following steps will add hosts which connect to the ES NAS for data access or mount the shared folder or iSCSI LUN on the ES NAS to the local machine into the list. The Host list will be used in subsequent setup steps (Create a shared folder, Create an iSCSI Target and iSCSI LUN).

1. Click "Storage Manager" on the main menu.



2. In the left menu, click "Hosts", then click "Create Host".

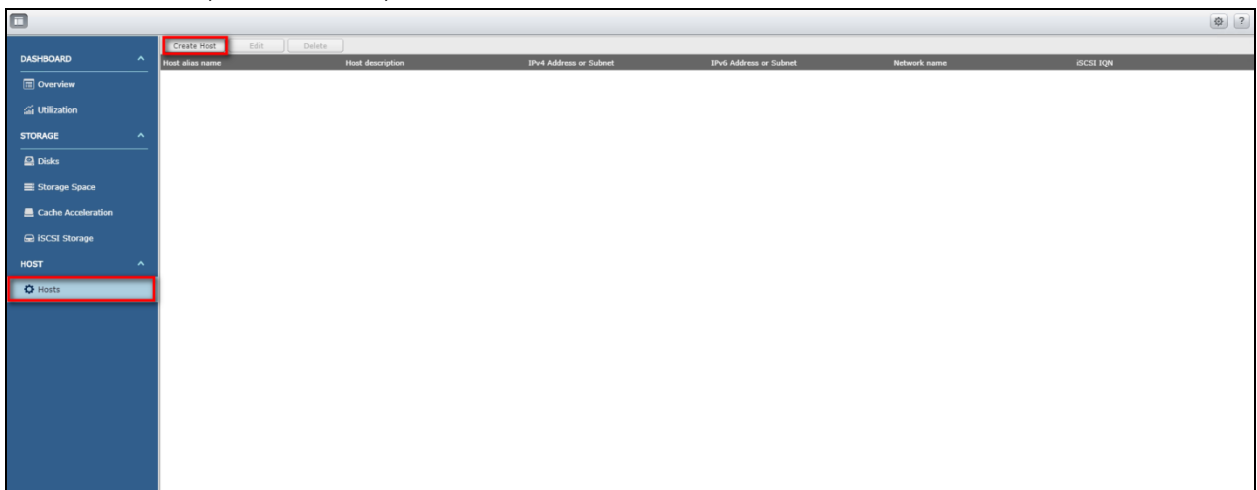

3. Enter the name of the host you want to add in the "Host Alias Name" field and click "+" on the right of "IPv4 Address or Subnet".

Create Host

Host Alias Name: Host01

Host Description:

IPv4 Address or Subnet: [Empty] +

IPv6 Address or Subnet: [Empty] +

Network Name: [Empty] +

iSCSI IQN: [Empty] +

Apply Cancel

4. Enter the port IP or subnet that will be used for data transfer between the Host and the ES NAS, and click "OK". Please note that you can enter multiple IP addresses here. Set the IP to the same subnet as the ES NAS data port.

Edit a host

Host Alias Name: Host01

Host Description:

IPv4 Address or Subnet: [Empty] +

IPv6 Address or Subnet: [Empty] +

Network Name: [Empty] +

iSCSI IQN: [Empty] +


Apply Cancel

Enter an IPv4 Address or Subnet

10.1.1.10

OK Cancel

5. When entering the IP addresses, click “Apply”.

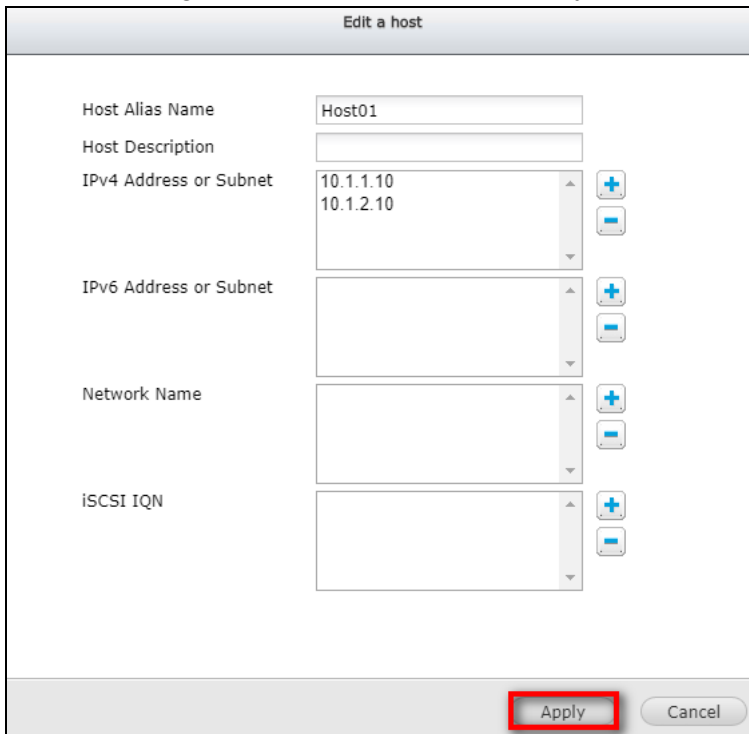

Host Alias Name: Host01

Host Description:

IPv4 Address or Subnet: 10.1.1.10, 10.1.2.10


IPv6 Address or Subnet:

Network Name:

iSCSI IQN:

Apply Cancel

6. Return to the "Hosts" page. You should be able to find the Host information just created on the list. Repeat the above steps to add multiple Hosts to the list.

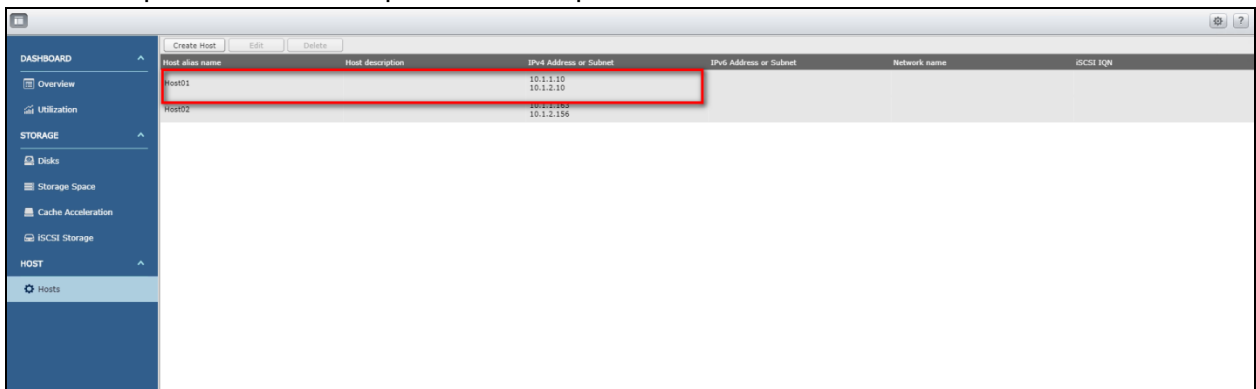

Host alias name	Host description	IPv4 Address or Subnet	IPv6 Address or Subnet	Network name	iSCSI IQN
Host01		10.1.1.10 10.1.2.10			
Host02		10.1.1.10 10.1.2.10			


Cache Acceleration

ES NAS supports SSD caching. When using SSD, it is recommended (but not necessary) to enable cache acceleration to significantly improve data access performance. Follow these steps to enable cache acceleration:


1. Click "Storage Manager" on the main menu.




2. In the left menu, click "Cache Acceleration", then click "Set SSD".

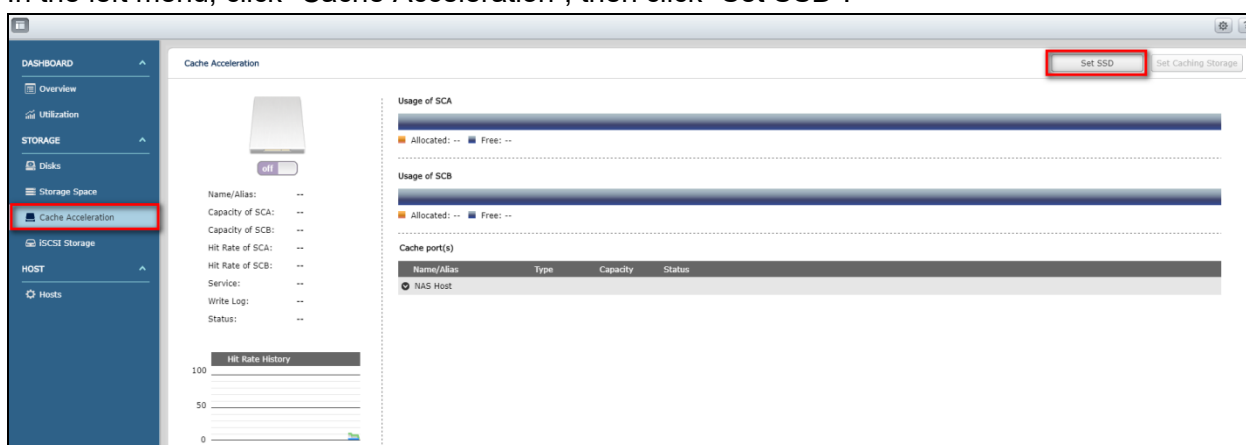


3. Select the controller or expansion device where the SSD is located, and then select the SSD to be accelerated and click "OK".

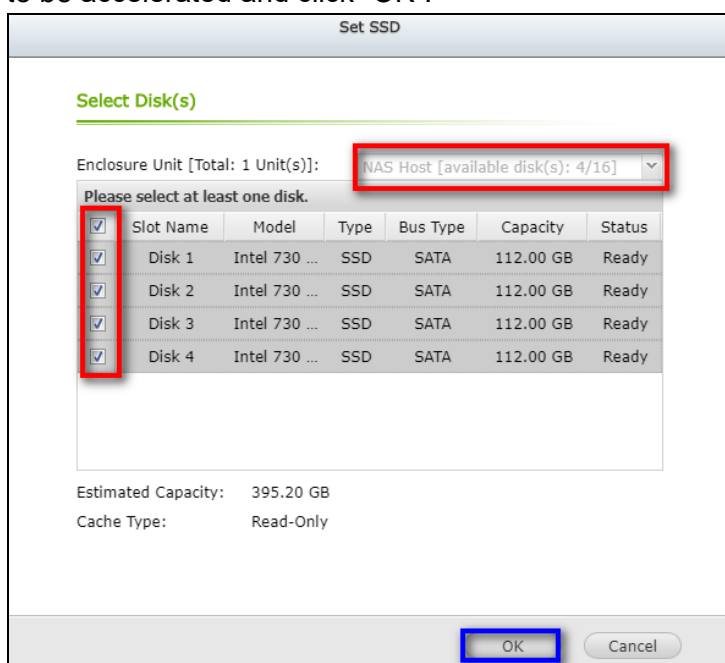

4. As this action will erase all of the data on the SSD, you will be prompted to confirm your decision.

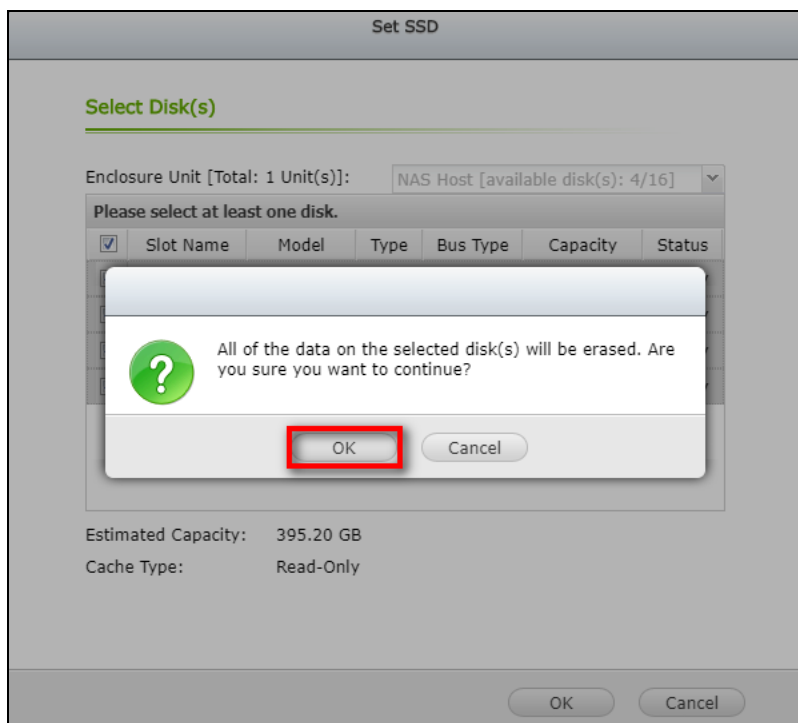

5. When the settings are complete, go back to the "Cache Acceleration" page. The red box below should have a status of "on", indicating that cache acceleration is enabled.

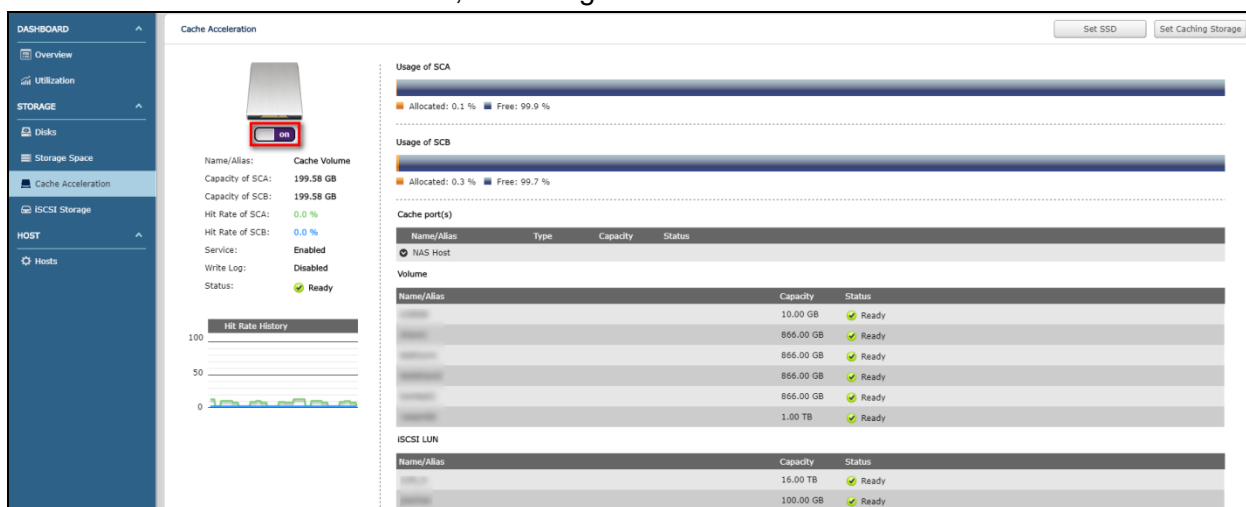

- To enable cache acceleration for individual shared folders or iSCSI LUNs, click “Set Caching Storage”.

The screenshot shows the 'Cache Acceleration' dashboard. In the top right corner, the 'Set Caching Storage' button is highlighted with a red box. The dashboard displays various metrics and settings for cache acceleration, including usage of SCA and SCB, cache ports, and a list of volumes and iSCSI LUNs.

Name/Alias	Type	Capacity	Status
Cache Volume	Cache Volume	199.58 GB	Ready
Capacity of SCA		199.58 GB	
Capacity of SCB		199.58 GB	
Hit Rate of SCA		0.0 %	
Hit Rate of SCB		0.0 %	
Service		Enabled	
Write Log		Disabled	
Status		Ready	

- Select the shared folders or iSCSI LUNs to enable/disable cache acceleration and select whether you want to perform large block and sequential I/O jobs in the cache space. For larger block, sequential I/O operations such as video streaming, the hit rate is lower, and by default, they are not recorded in the cache space. To record such jobs, uncheck “Bypass Prefetch Data”. Click "Finish" to complete the setting.

The screenshot shows the 'Switch SSD Cache' dialog box. The 'Enable/Disable Shared Folder or iSCSI Lun SSD Cache' section shows a list of items with checkboxes. The 'Bypass Prefetch Data' checkbox is checked and highlighted with a red box. The 'Finish' button is highlighted with a blue box.

Select to enable SSD cache / Deselect to disable SSD cache	Name/Alias	Type	SSD Cache
<input checked="" type="checkbox"/>		Volume	Enabled
<input checked="" type="checkbox"/>		Volume	Enabled
<input checked="" type="checkbox"/>		Volume	Enabled
<input checked="" type="checkbox"/>		Volume	Enabled
<input checked="" type="checkbox"/>		Volume	Enabled
<input checked="" type="checkbox"/>		Volume	Enabled
<input checked="" type="checkbox"/>		iSCSI LUN	Enabled
<input checked="" type="checkbox"/>		iSCSI LUN	Enabled

☒ Bypass Prefetch Data i


Finish Cancel

Add storage pool


1. Click "Storage Manager" on the main menu.




2. In the left menu, click "Storage Space", then click "Create". In the drop-down menu, click "New Storage Pool".

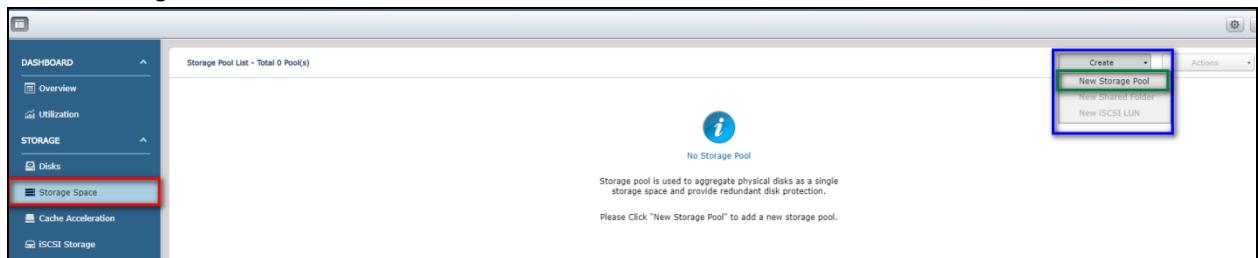


3. Name the storage pool, select the controller and enclosure unit to which it belongs, and select the hard disk and RAID configuration for the new storage pool, then click "Next". Please note that all of the data on the selected drives will be deleted.

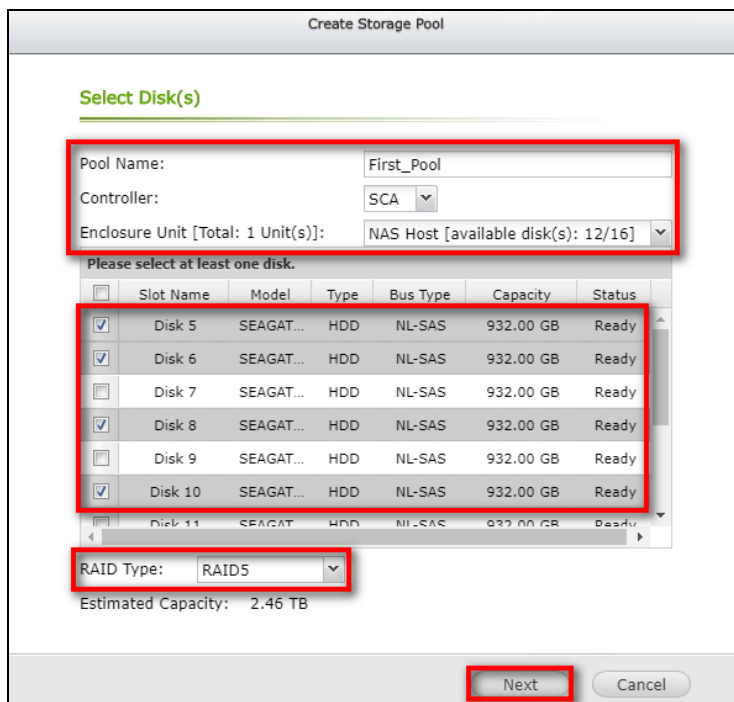


4. Confirm the settings again, and then click “Create”.

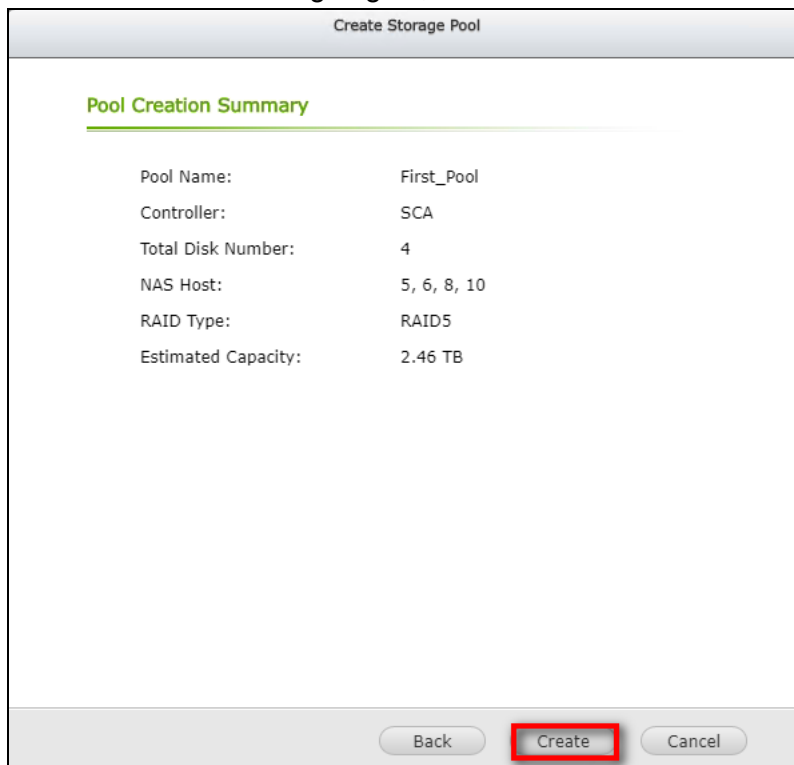

5. A confirmation window will appear. Click “OK”.

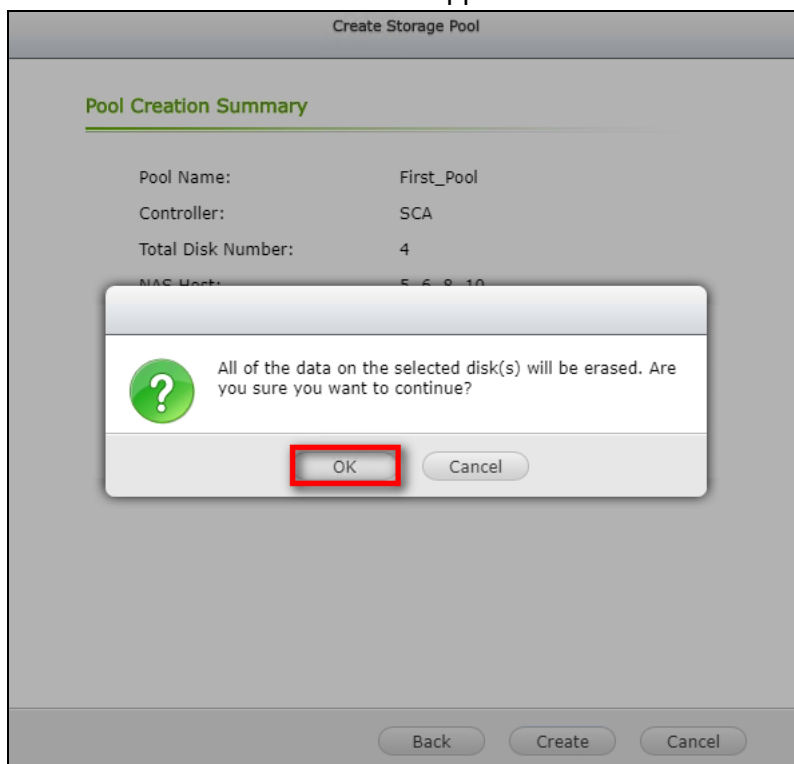

6. A new storage pool is now created.

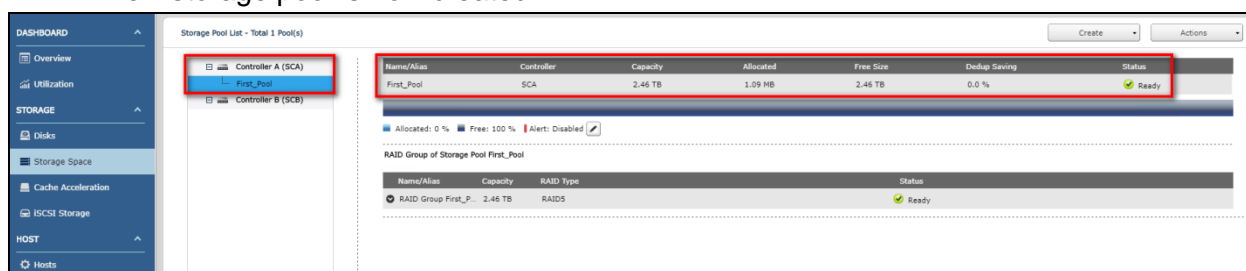


Expanding Storage Pools

To expand the storage pool capacity or create a RAID 50 or RAID 60 group, follow the below steps:

1. Click "Storage Manager" on the main menu.




In the left menu, click "Storage Space", then select the controller and the storage pool under the controller in the Storage Pool List, then click "Action" at the top right, and click "Expand Pool" in the drop-down menu.

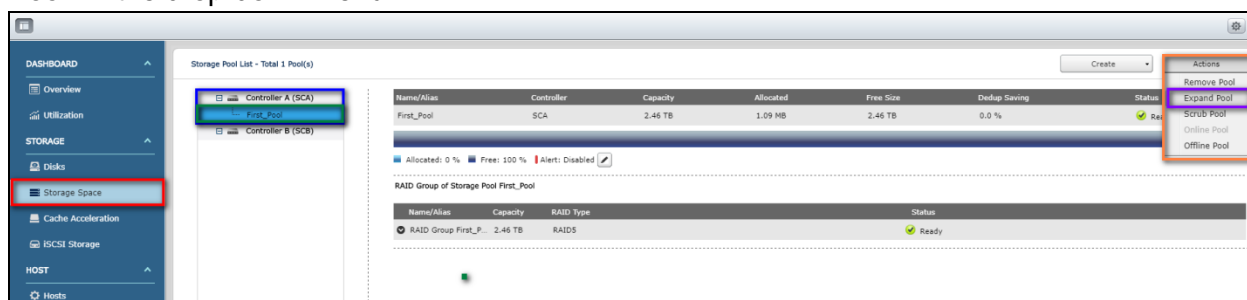


3. Select the enclosure unit (you can also select the disk from the list of available hard disks) and click "Expand". ES NAS uses parallel RAID groups to extend the storage pool, so the minimum number of hard disks to select is determined by the RAID configuration of the storage pool. For example, if the RAID configuration of the storage pool is RAID5, then the number of hard disks to expand must be at least three (the minimum number of disks for RAID 5), and the RAID configuration of the storage pool after expansion will be RAID 50. Similarly, if the RAID configuration of the storage pool is RAID 6, then you must select at least


four hard disks (minimum number of disks for RAID 6), and the RAID configuration of the storage pool after expansion is RAID 60.

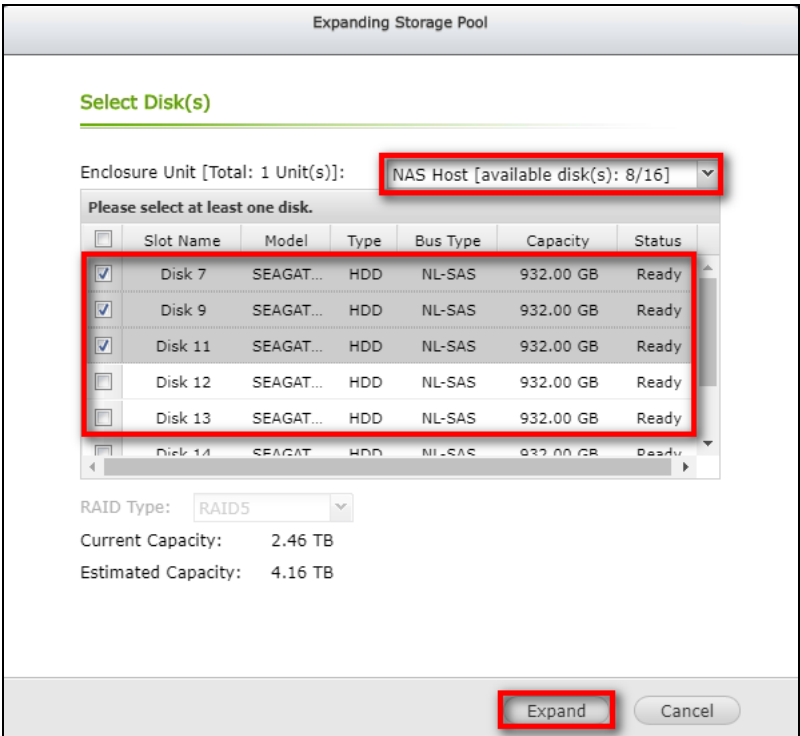

4. A confirmation window will appear. Click “OK”.

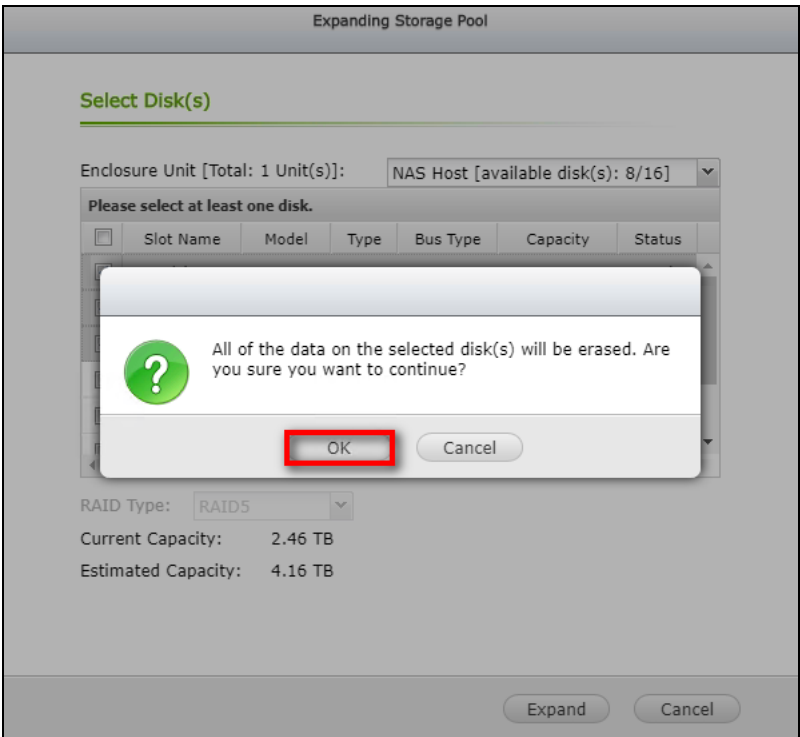

5. The storage pool capacity is now expanded.

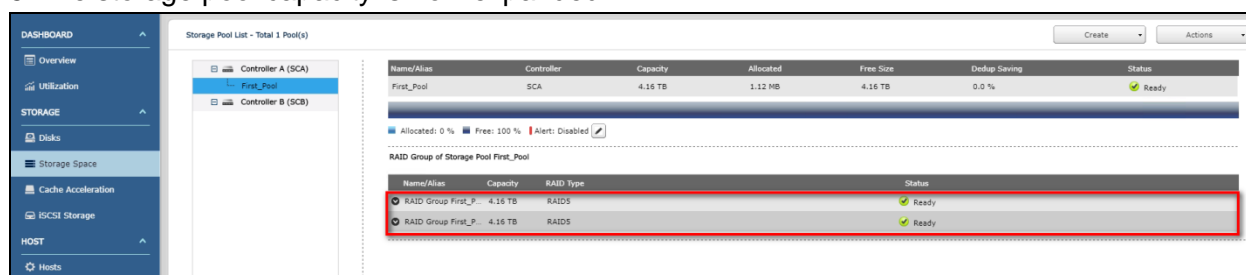


Create a shared folder

Before you can create shared folders, the storage pool and data port must be set up.

1. On the main menu, click "Shared Folders".



2. In the Storage Pool List, select a storage pool, then click [Create] on the top right, and in the drop-down menu, click [New Shared Folder].

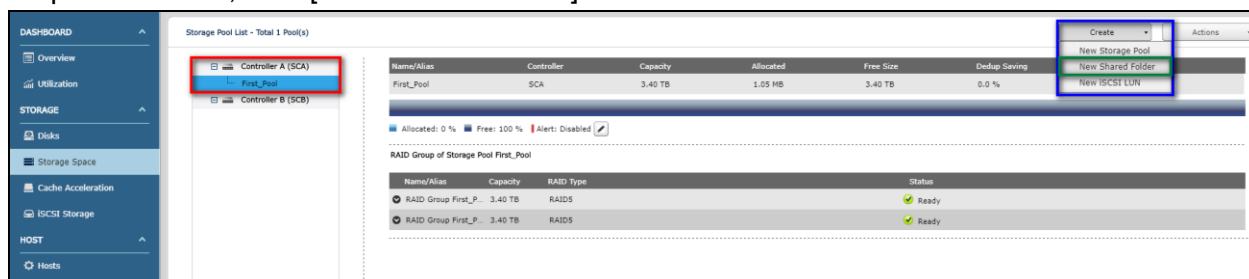

3. Name the folder, view and copy the folder CIFS / SMB and NFS path in "Shared Path" and "NFS Path" respectively; then in "Storage Settings and Services", select the features according to the different application scenarios. The parameters are described below.

- **Thin Provision:** Allows the system to over-allocate the storage capacity regardless of the physical storage limit, and the physical disk space is used only when files are written into shared folders. It provides better space utilization.
- **Folder Quota:** Set the size of this shared folder. If not specified, the default is the maximum available space for the Pool.
- **Compression:** Data in the shared folder will be compressed to save storage space.

- Deduplication: Deduplication merges duplicate content in the shared folder to optimize disk space.
- SSD Cache: Frequently-accessed data in the shared folder will be placed in the SSD cache to improve access speed.

If there are no special requirements, retain the default values (under Storage Settings, keep the two options “Thin Provision” and “Compression” checked, and all options under Storage Services checked). Once the settings are confirmed, click “Create”.

Create A Shared Folder

Please fill out the following fields to create a shared folder

Folder Name: First_Share

Description: The first shared folder created.

Shared Path: \\10.1.1.13\First_Share

NFS Path: 10.1.1.13:/share/First_Share

Select the storage pool to create the shared folder.

Storage Pool: First_Pool (SCA) Free Size: 3.40 TB

Storage Settings and Services

Storage Settings

- ☒ Thin Provision
- ☐ Folder Quota [] TB
- ☒ Compression
- ☐ Deduplication Skein
- ☐ SSD Cache

Storage Services

- ☒ CIFS/SMB
- ☒ NFS
- ☒ FTP/FTP

Configure access privileges for users

Currently, only the "admin" account has full permissions for this folder.

Create Cancel

- The shared folder is created and appears in the list at the bottom-right of the “Storage Space” page. If the Host will mount or access this shared folder via NFS protocol, click the shared folder and continue with the following steps to set the permissions for the shared folder.

Storage Pool List - Total 1 Pool(s)

Name/Alias	Controller	Capacity	Allocated	Free Size	Dedup Saving	Status
First_Pool	SCA	3.40 TB	2.03 MB	3.40 TB	0.0 %	Ready

Allocated: 0 % Free: 100 % Alert: 80 %


RAID Group of Storage Pool First_Pool

Name/Alias	Capacity	RAID Type	Status
RAID Group First_P...	3.40 TB	RAID5	Ready
RAID Group First_P...	3.40 TB	RAID5	Ready


Shared Folder of Storage Pool First_Pool

Name/Alias	Capacity	Used	Thin	Status	Snapshot
First_Share	3.40 TB	202.00 KB	Yes	Ready	0

5. Click “Permissions”.

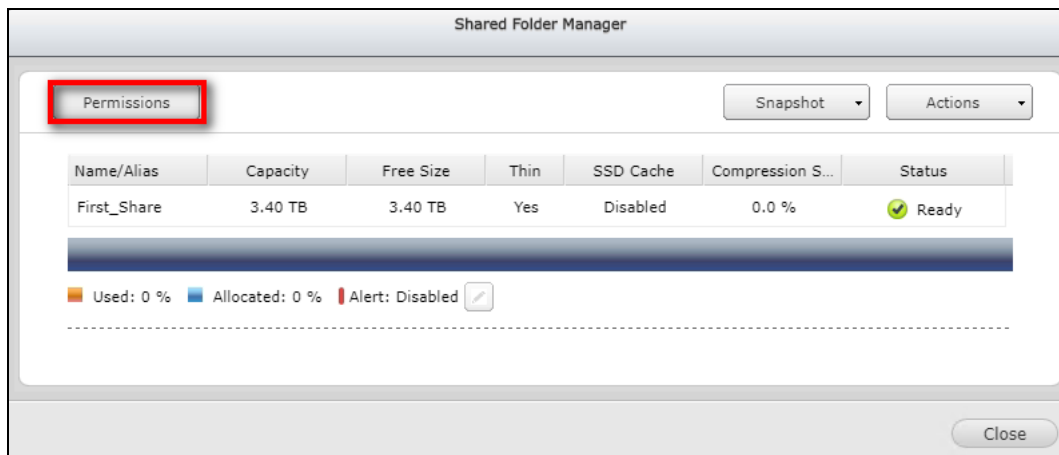

6. Select “NFS host access” in the “Select permission type” drop-down menu.

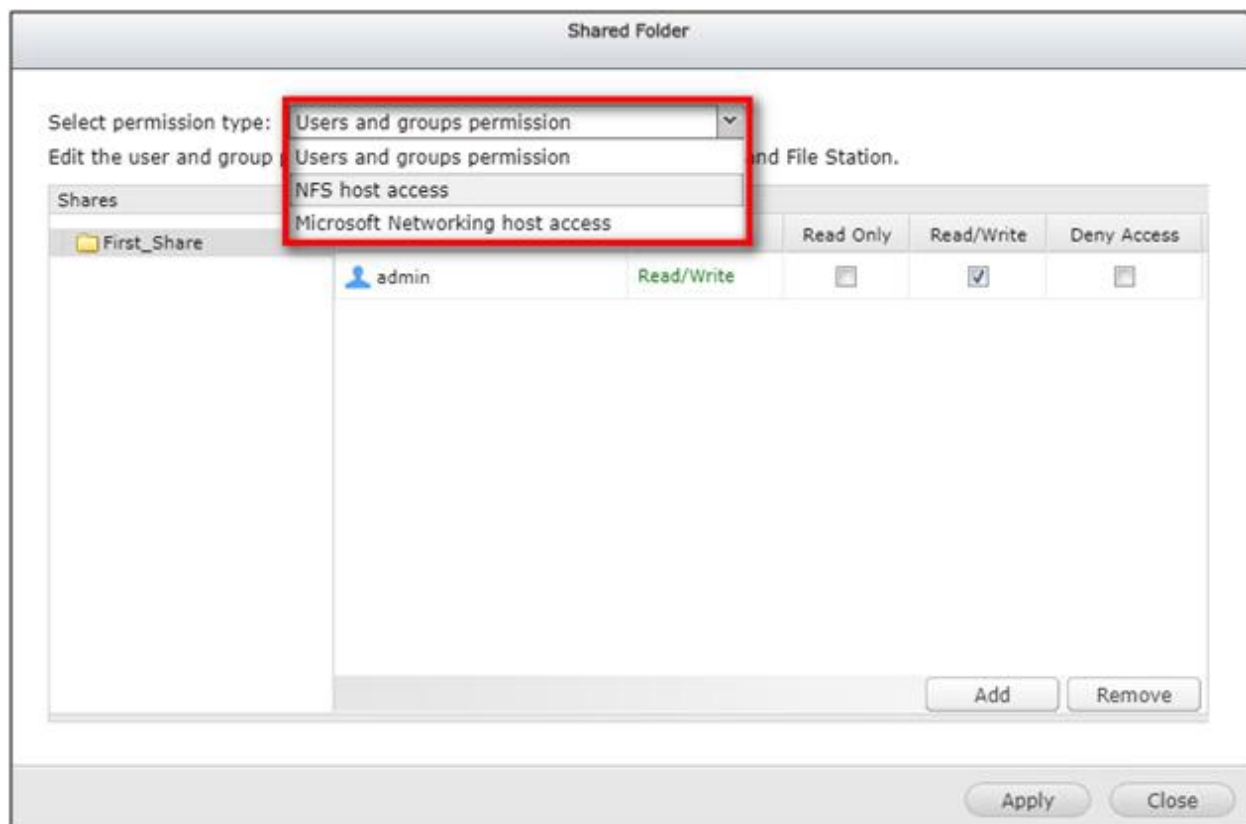

7. Select "No limit" in the "Access right" drop-down menu.

The screenshot shows the 'Shared Folder' configuration window. The 'Select permission type' is set to 'NFS host access'. The 'Edit the NFS permissions' section shows the 'Shares' list with 'First_Share' selected. The 'Access right' dropdown menu is open, showing options: 'Deny access', 'No limit', 'Read only', and 'Deny access'. The 'No limit' option is highlighted. The 'User' and 'Group' dropdowns are both set to 'admin' and 'users' respectively. The 'Map_Root' and 'Map_All' radio buttons are both selected. The 'All hosts can access' checkbox is unchecked. The 'Create Host' button is visible. The 'Apply' and 'Close' buttons are at the bottom right.

8. Select the specified Host and click "Apply" to complete the setup.

The screenshot shows the 'Shared Folder' configuration window. The 'Select permission type' is set to 'NFS host access'. The 'Edit the NFS permissions' section shows the 'Shares' list with 'First_Share' selected. The 'Access right' dropdown menu is set to 'No limit'. The 'User' and 'Group' dropdowns are both set to 'admin' and 'users' respectively. The 'Map_Root' and 'Map_All' radio buttons are both selected. The 'All hosts can access the shared folder' checkbox is unchecked. The 'Create Host' button is visible. The 'Hosts' table is shown with the following data:

Alias	Description	IPv4	IPv6	Network ...	iSCSI IQN	Operatin...
Host01		10.1.1.10				
Host02		10.1.1.1...				


The 'Host01' and 'Host02' rows are selected. The 'Apply' button is highlighted. The 'Close' button is at the bottom right.

Create an iSCSI Target and iSCSI LUN


1. To create an iSCSI Target and iSCSI LUN, click "Storage Manager" on the main menu.




2. In the left menu, click "iSCSI Storage". You will be asked if you want to launch the quick configuration wizard. Click "OK".

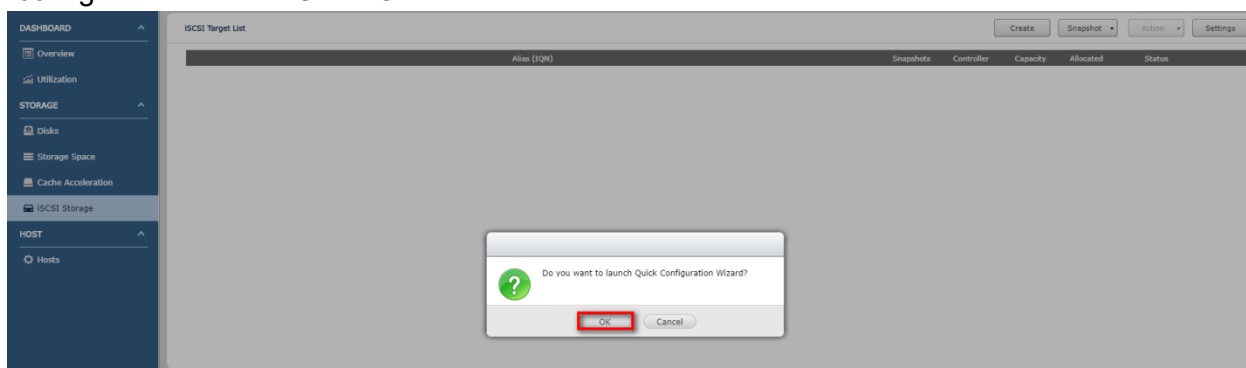

3. If you click "Cancel" in the previous step, you can still start the iSCSI Storage Quick Configuration Wizard by clicking "Create" on the iSCSI Storage page.

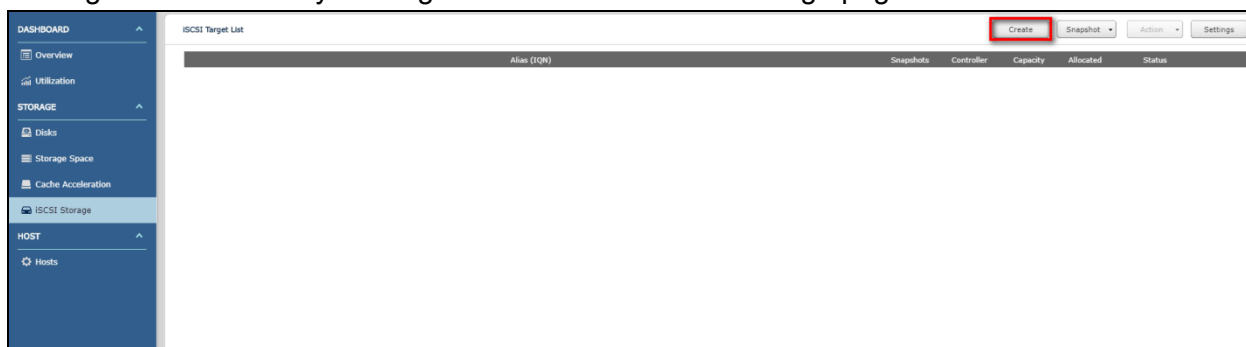

4. Select the iSCSI Target with a mapped LUN option and click “Next”.

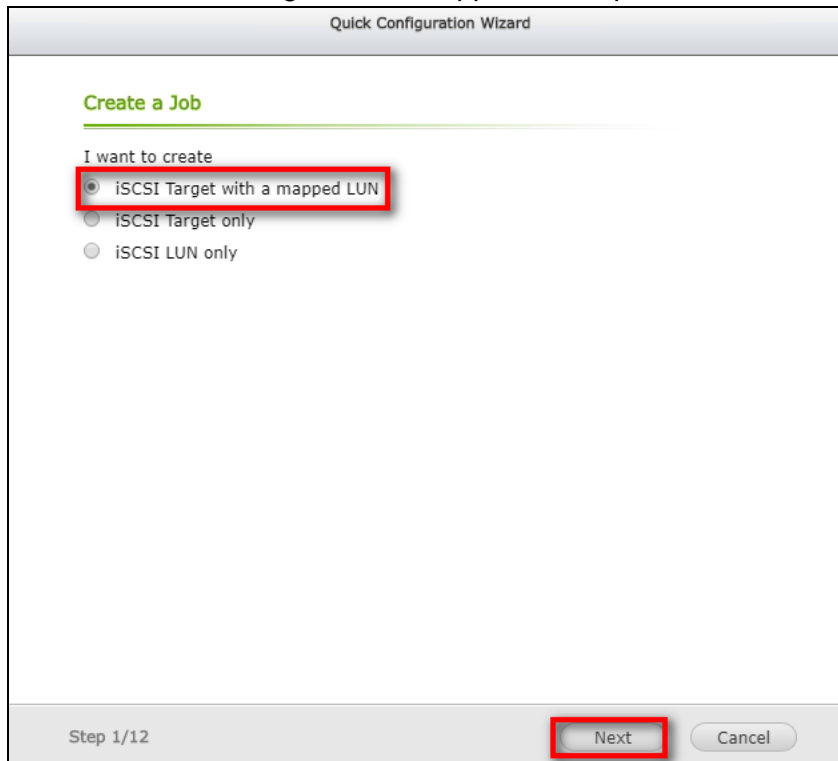

Quick Configuration Wizard

Create a Job


I want to create

- ☒ iSCSI Target with a mapped LUN
- ☐ iSCSI Target only
- ☐ iSCSI LUN only

Step 1/12

Next Cancel

5. Verify that you are creating an iSCSI Target and an iSCSI LUN mapped to the iSCSI Target. Click “Next”.

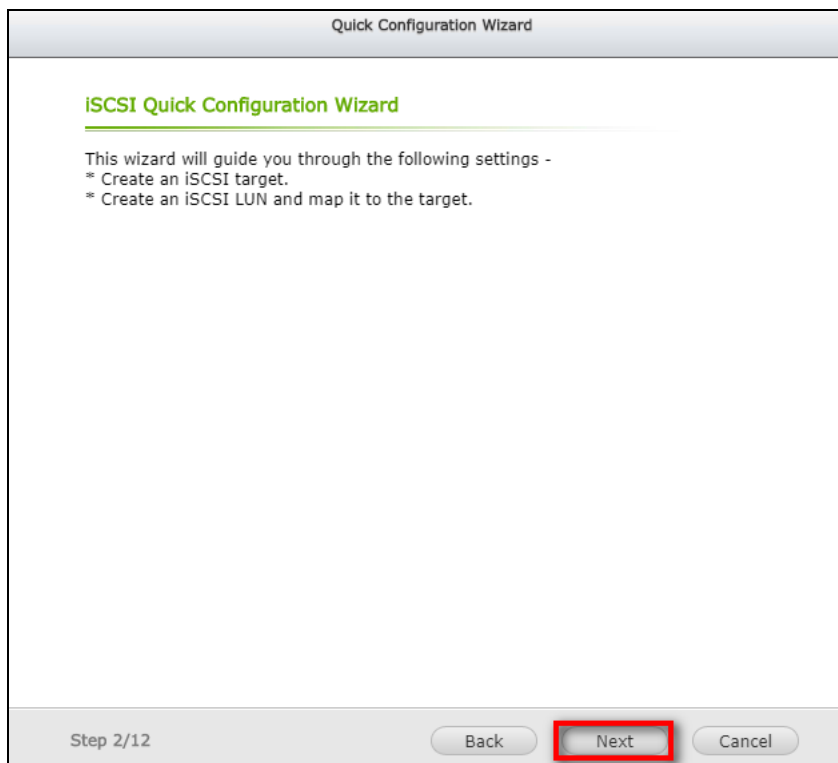

Quick Configuration Wizard

iSCSI Quick Configuration Wizard

This wizard will guide you through the following settings -

- * Create an iSCSI target.
- * Create an iSCSI LUN and map it to the target.

Step 2/12

Back Next Cancel

6. Enter the name and alias of the iSCSI Target you want to create in the “Target Name” and “Target Alias fields” respectively. The CRC/Checksum below is the parameter used when the iSCSI initiator is connected to the iSCSI Target. This is an optional setting. When complete, click “Next”.

The screenshot shows the 'Quick Configuration Wizard' window at Step 3/12, titled 'Create New iSCSI Target'. The 'iSCSI Target Profile' section contains the following fields: 'Target Name' with the value 'FirstTarget', 'iSCSI Target IQN' with two lines of text: 'iqn.2004-04.com.qnap:es1640dc:iscsi.firsttarget.0d806e.0' and 'iqn.2004-04.com.qnap:es1640dc:iscsi.firsttarget.0d806e.1', and 'Target Alias' with the value 'FirstTarget'. Below these are 'CRC/Checksum (optional)' settings with 'Data Digest' and 'Header Digest' both set to 'none'. At the bottom, the 'Next' button is highlighted with a red box.

7. If you need to use CHAP authentication, enter the account password, and click “Next”. If you do not need CHAP authentication, just click “Next”.

The screenshot shows the 'Quick Configuration Wizard' window at Step 4/12, titled 'CHAP Authentication Settings'. The 'Use CHAP authentication' checkbox is checked. Below it are three input fields: 'Username' with the value 'JohnDoe', 'Password' with masked characters, and 'Re-enter Password' with masked characters. These three fields are grouped by a red box. Below this group are three unchecked checkboxes: 'Mutual CHAP', followed by 'Username:', 'Password:', and 'Re-enter Password:' labels, each with an empty input field. At the bottom, the 'Next' button is highlighted with a red box.

8. Select the data ports you want to use for data transfer. If there are no special requirements, you can just use the default (all selected). Click "Next".

Quick Configuration Wizard

Portal Setting

<input checked="" type="checkbox"/>	Action	Link	Interface	IP Address
<input checked="" type="checkbox"/>		<input checked="" type="radio"/>	Ethernet 1	10.1.1.13/10.1.1.14
<input checked="" type="checkbox"/>		<input type="radio"/>	Ethernet 2	--
<input checked="" type="checkbox"/>		<input checked="" type="radio"/>	Ethernet 3	10.1.2.13/10.1.2.14
<input checked="" type="checkbox"/>		<input type="radio"/>	Ethernet 4	--
<input checked="" type="checkbox"/>		<input type="radio"/>	Ethernet 5	--
<input checked="" type="checkbox"/>		<input type="radio"/>	Ethernet 6	--

Step 5/12

Back **Next** Cancel

9. Change the access rights of the specified Host to "All Access" in the list and click "Access" to modify the settings. Click "Next".

Quick Configuration Wizard

Host Access

Create Host

Action	Alias	Network Address	iSCSI IQN	Access
	Host01	10.1.1.10 10.1.2.10		No Access
	Host02	10.1.1.163 10.1.2.156		No Access

Access

No Access

No Access

All Access

Step 6/12

Back Next Cancel

10. In this step, you can modify the iSCSI LUN name, location (which will determine the default owner of this LUN as controller A or controller B), capacity, alert threshold, performance profiling and more. If you have no special requirements, just use the defaults and click “Next”.

Quick Configuration Wizard

Create an iSCSI LUN

LUN Name:

LUN Allocation: ☒ Thin Provisioning ☐ Instant Allocation

LUN Location:

Free Size: 3.29 TB

Capacity:

Alert threshold: 80 %

Performance Profiling:

☒ Synchronous I/O

☐ SSD Cache

☐ Deduplication


☒ Compression

☐ Encryption

Step 8/12

Back **Next** Cancel

11. Return to the configuration. If it is correct, click “Next”. If it is incorrect, click “Back” to return to the previous step to modify the configuration.

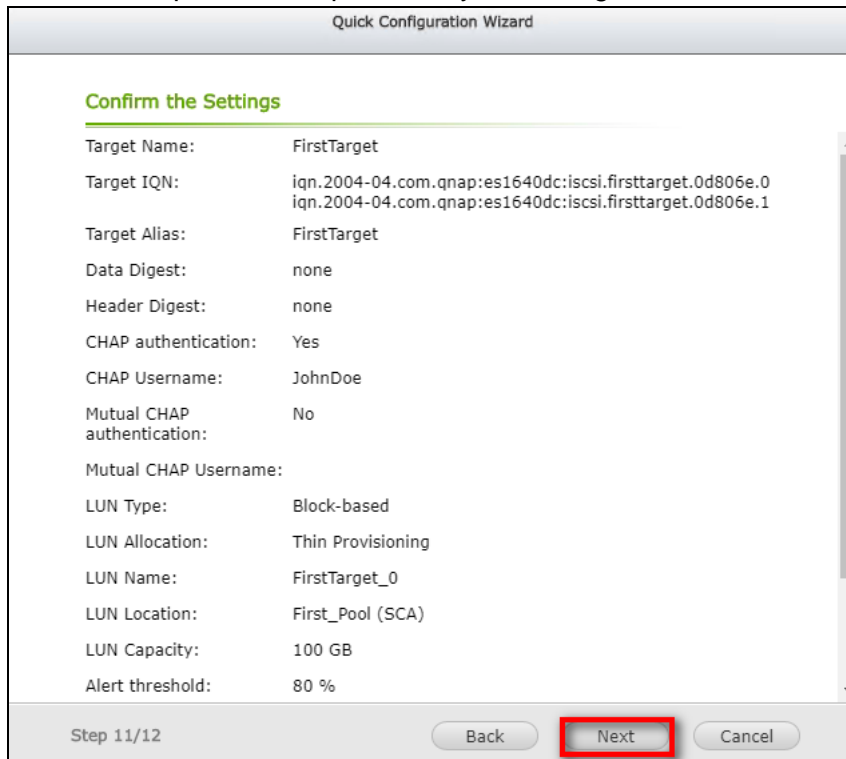

Quick Configuration Wizard


Confirm the Settings

Target Name:	FirstTarget
Target IQN:	iqn.2004-04.com.qnap:es1640dc:iscsi.firsttarget.0d806e.0 iqn.2004-04.com.qnap:es1640dc:iscsi.firsttarget.0d806e.1
Target Alias:	FirstTarget
Data Digest:	none
Header Digest:	none
CHAP authentication:	Yes
CHAP Username:	JohnDoe
Mutual CHAP authentication:	No
Mutual CHAP Username:	
LUN Type:	Block-based
LUN Allocation:	Thin Provisioning
LUN Name:	FirstTarget_0
LUN Location:	First_Pool (SCA)
LUN Capacity:	100 GB
Alert threshold:	80 %

Step 11/12

Back Next Cancel

12. After completion, click “Finish” to exit the wizard.

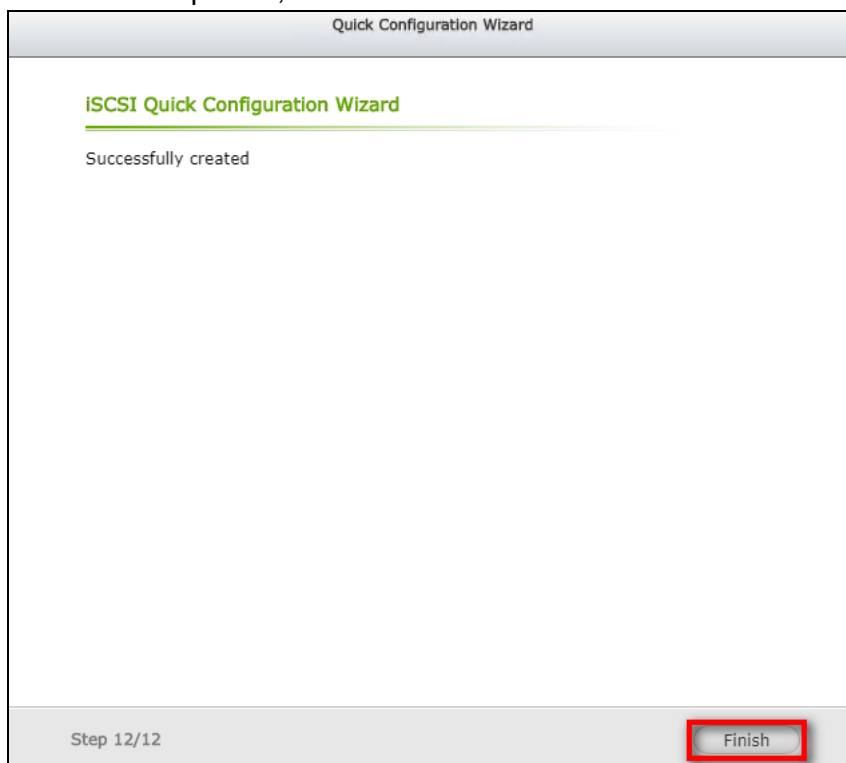

Quick Configuration Wizard

iSCSI Quick Configuration Wizard

Successfully created

Step 12/12

Finish

13. Return to the iSCSI Storage page. In the iSCSI Target List, you will see the iSCSI Target you just created. Double-click the iSCSI Target and the iSCSI LUN you just created will show below. This means that the iSCSI Target and iSCSI LUN have been created successfully. Under each Target, you will see two iqns, representing the target is created on controller A and controller B (iqn ending with .0 is controller A, .1 is controller B) respectively, and the word "Preferred" at the end means that the Target is the default optimal IO path. Therefore, a LUN mounted on a Target with controller A as Preferred default will not be able to be mounted on a Target with controller B as the default. Similarly, a LUN mounted on a Target with controller B as Preferred default will not be able to be mounted on a Target with controller A as the default.

